

PILOTUNER T-601

Back Cover

8 5/8" x 6 3/4"

Make from ClipBoard Masonite

A. Antenna connections

(IMPORTANT — FOR **AC** OPERATION ONLY)

- (1) This set has a permanent built-in antenna connected through wire link between terminals No. 1 and No. 2.
- (2) For Outside antenna: (a) **Disconnect** wire link between terminals No. 1 and No. 2, and attach a 4 ft. length of wire to terminal No. 1, **or** (b) Connect FM dipole antenna to terminals No. 1 and No. 3.

B. Connections from Pilotuner to radio receiver

- (1) Use the 5 ft. connector cable, included with set, consisting of a center wire and a surrounding metal shield wire.
- (2) Attach one end of center wire of connector cable to terminal No. 7, and outside shield wire of same end to terminal No. 6.
- (3) Connect other end of center wire to "high" side (easily determined — when touched creates speaker hum) of phonograph terminal of radio receiver, and other end of shield wire to "low" side. For further details see instruction booklet.
- (4) If there is no phonograph terminal connection on radio receiver, see instruction booklet for proper attachment of Pilotuner to the radio receiver.

C. Connections from radio receiver phonograph to Pilotuner.

- (1) Attach center wire of phonograph connector cable to terminal No. 5, and outside shield of same wire to terminal No. 4.
- (2) Phonograph can be operated as usual when power switch of tuner is in "off" position.



Pilot

RADIO CORPORATION

LONG ISLAND CITY 1, N.Y. U.S.A.